 


Activity timeline for XT200i and Frontel

IMV200 Motion Viewer

If XT200i is configured to transmit signal to Monitoring Station, it will attempt to establish a GPRS connection to the Monitoring Station within 15 minutes. If the connection is unsuccessful, it will be recorded in the log as Transmission Failed and together with GPRS error code. If a video was available, it will be recorded as Video Lost.

FRONTEL				
Receiving Signal from XT210	Uploading Video to Frontel (if available)	Operator can perform commands to arm/disarm, request video, request picture or hang up.	idle (no uploading from panel, no commands from operator)	Auto hang up on Frontel and XT200i



Time